

PM-SV Electronic Voltmeter

1. INTRODUCTION

PM-SV measures per three phases or values of phase to phase and it shows the values on the screen as user wants.

2. USAGE OF PM-SV

When the voltage is applied to the terminal ends, the voltage value on the input end is displayed. The phase-phase and phase-neutral measuring and monitoring can be performed.

3. CONNECTION DIAGRAM

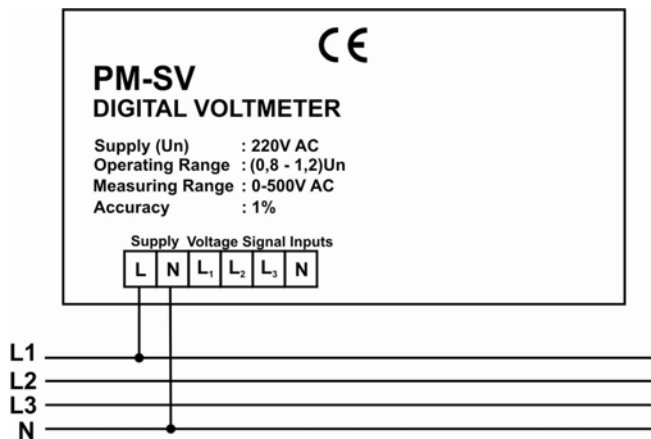


Figure-1 Connection Diagram

4. TECHNICAL SPECIFICATIONS

Supply Voltage (Un)	220VAC
Operating Range	(0.8-1.2)xUn
Operating Frequency	50/60 Hz
Measuring Range	0-500VAC
Measuring Sensitivity	± % 1
Mounting Type	Panel mount
IP Class	IP 20
Plastic Material	V0 Uninflammable
Operating Temperature	-25°C ... +65°C
Weight	72x72: 245gr., 96x96: 305gr.


5. USAGE AND SAFETY

Serious injury or health problems may occur if following topics are ignored;

- Turn off power during connection.
- Do not remove front panel while power applied.
- Do not clean device with solvents or equivalent.
- Check all connections.
- Technical problems have to be fixed only by authorized technical staff.
- F type 1A fuse have to be used.

Inter Electric Ind. Co. is not responsible from the results that may occur if above topics are ignored.

6. MECHANICAL DIMENSIONS

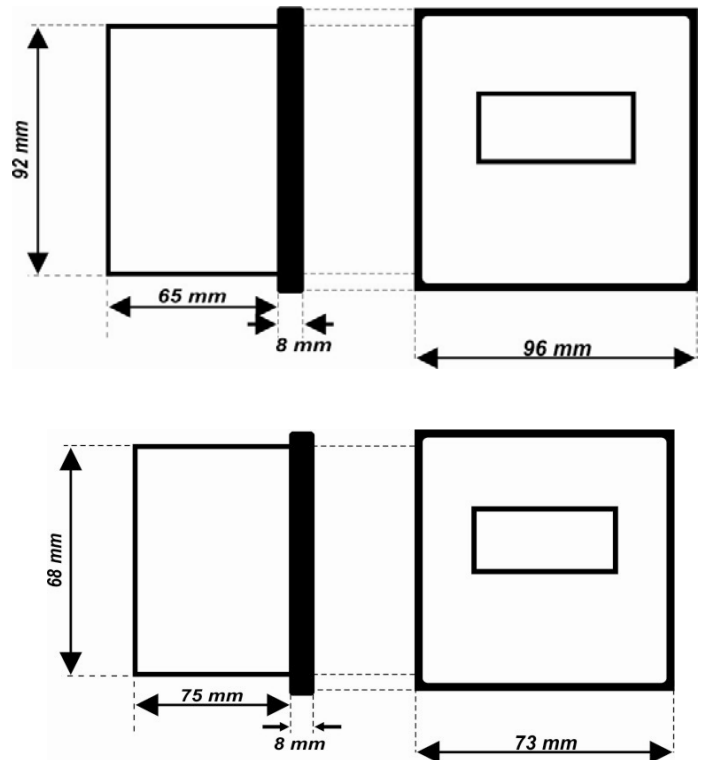

INTER ELECTRIC-ELECTRONIC IND.CO. LTD.

Sales contact in Argentina: ELINDAR SRL

Tel: +54 11 4247-4094 Fax: +54 11 4247-4094

Web: www.elindar.com.ar E-Mail : info@elindar.com.ar